




Directions for Swing Master Golf Net and Frame

1	Long Single Pin Piece	2
2	Long Double Pin Piece	4
3	Short One Pin Piece	2
4	One Pin Piece w/ Ring	2
5	Short Double Pin Piece	2
6	4-Way Bottom Piece	2
7	Angle Corner	2
8	90° Corner	2
9	Golf Net	1
10	Golf Baffle	1

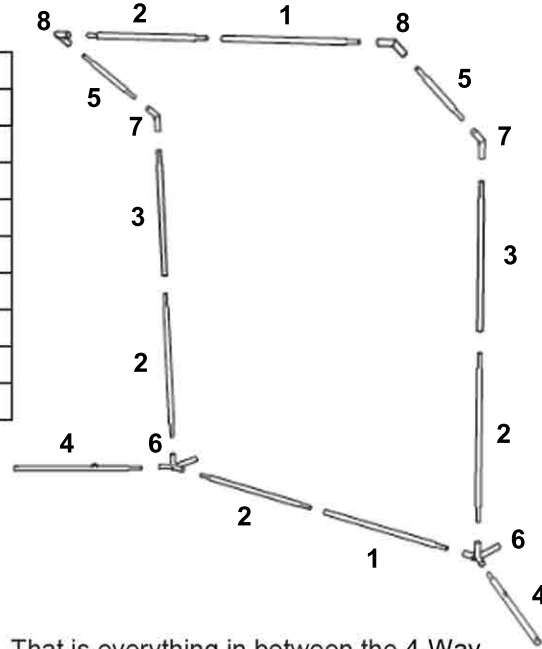


Assemble The Frame

1. Lay out all of the steel pieces per the diagram.
2. Assemble the “back” of the frame on the ground. That is everything in between the 4-Way Bottom Piece and the Angle Corner including the cross bar.
3. Assemble the feet by inserting the 4 poles into the 4-Way Bottom Piece.
4. Assemble the top by combining the rest of the pieces to what you have already done.
5. Tip the frame forward on it's feet.

Hang the Net

6. Hang the Top/Front of the Net to the 90° Corners. Do this by inserting the S-Hook through the ring.
7. Attach the Bottom/Front of the Net to the One Pin Piece w/ Rings. Do this by hooking the S-Hook into the pipe.
8. Attach the Bottom/Back of the Net to the ring on the One Pin Piece w/ Rings. Do this by inserting the S-Hook into the ring.
9. Attach the Top/Back of the Net to the Angle Corners. Do this by inserting the S-Hook into the ring. You may adjust the string to achieve your desired net shape.
10. Tuck the Net Toggles under the One Pin Piece w/ Rings.
11. Attach the Baffle directly to the frame using the d-clips that you have fed through the net. The top of the baffle has shorter strings and attaches to the Angle Corners, while the bottom clips are connected to the 4-way Bottom Piece.

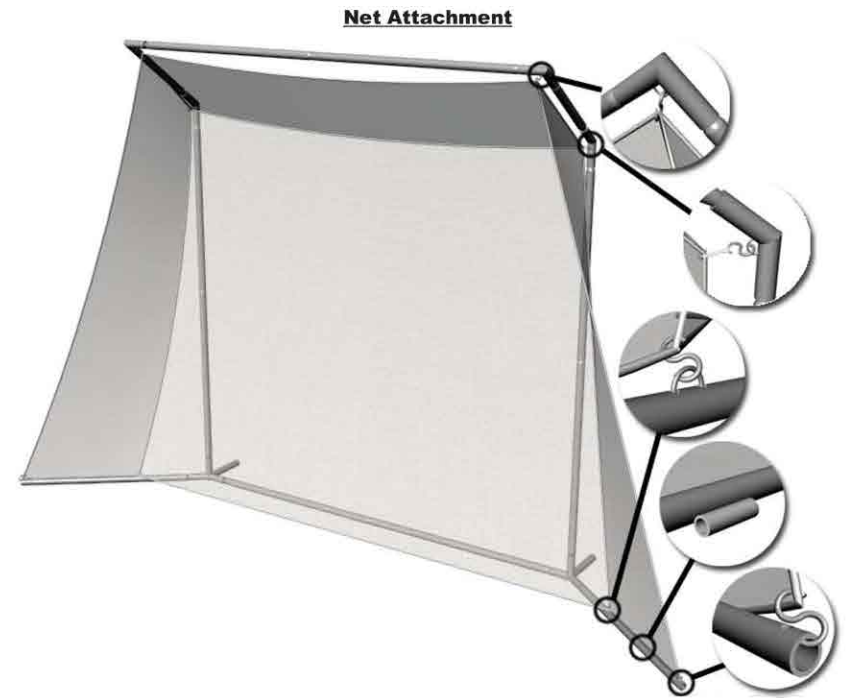

Baffle Attachment
(Net Removed for Clarity)



Completed Golf Net and Frame

