


Directions for Super Swing Master Golf Net and Frame

1	Single Pin Foot Piece	2
2	No Pin Foot Curve w/ Rings	2
3	Double Pin Piece	6
4	Single Pin "T"	2
5	No Pin Top Curve	2
6	Single Pin Piece	2
7	No Pin Top Corners	2
8	Golf Net	1
9	Golf Baffle	1

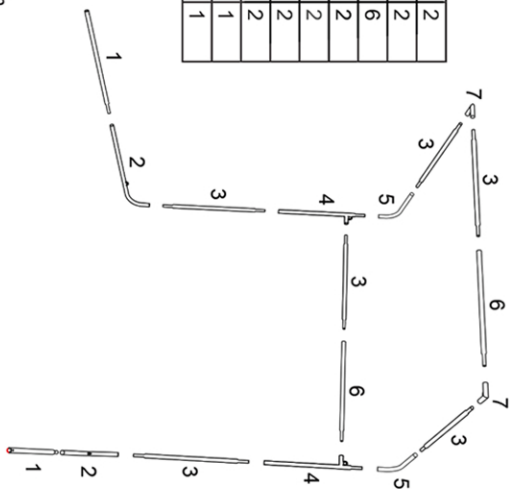

Assemble The Frame

1. Lay out all of the steel pieces per the diagram.
2. Assemble the "back" of the frame on the ground. That is everything in between the No Pin Foot Curve w/ Rings and No Pin Top Curves including the cross bar. NOTE: There is a left and right No Pin Top Curves, Make sure the holes face the inside.
3. Assemble the feet by inserting the Single Pin Foot Pieces into the No Pin Foot Curve w/ Rings.
4. Assemble the top by combining the remaining pieces to what you have already done.
5. Tip the frame forward on it's feet. Lift using the cross bar.

Hang the Net

6. Attach the bottom of the net to the frame at all 4 corners using the S-Hooks. The bottom of the net can be easily found because it has toggles along it.
7. Check the top of the net to make sure that the support string is below the netting. If it is not flip your net over and reattach the bottom.
8. Attach the Top/Front of the Net to the No Pin Top Corners.
9. Attach the Back of the net to the Single Pin "T"s. Adjust the net as necessary by tightening or loosening the strings.
10. Slide the Toggles under your frame.
11. Attach your baffle directly to the frame. The top of the baffle is narrower and has S-Hooks, while the bottom has toggles.

